


### Application of Koster Joint Tape and Adhesive

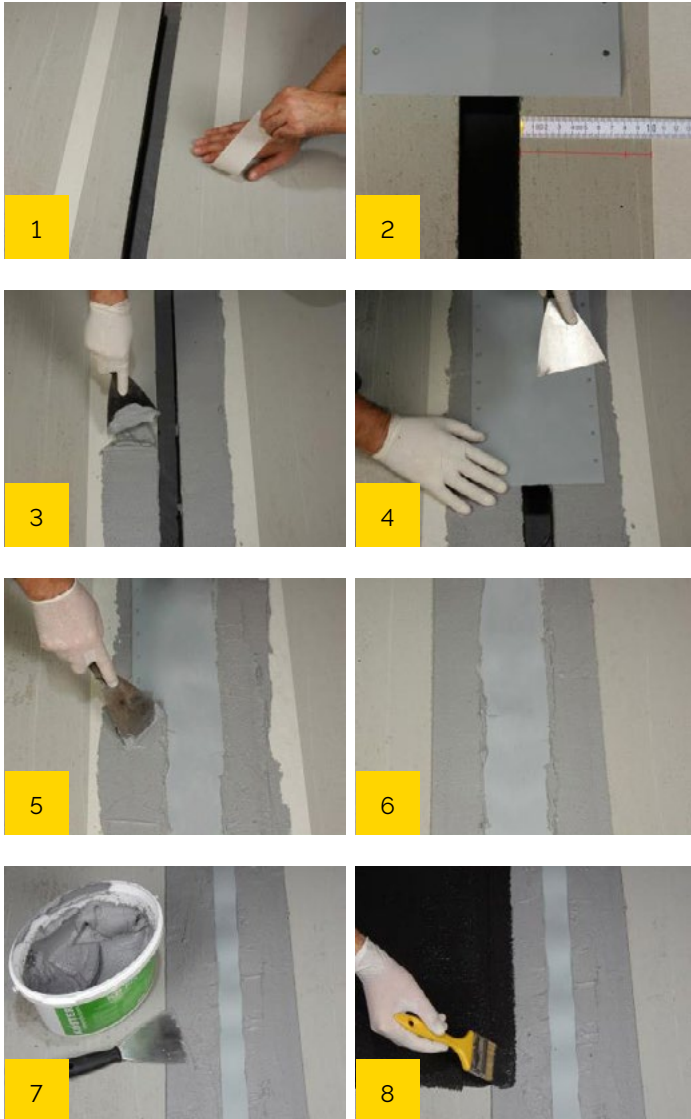

#### Application of the Koster Joint Tape 20 and Joint Tape 30 using Koster KB-Pox Adhesive

1. Mask both sides of the joint with tape.
2. Embed Koster Joint Tape 20 min. 4 cm (Joint Tape 30 min. 5 cm) into the adhesive on each side. The adhesive is applied 2 cm farther onto the substrate.
3. Mix the A and B components of Koster KB-Pox Adhesive as stated in the technical guideline to a homogenous grey color. Apply Koster KB-Pox Adhesive on both sides approx. 2 mm thick.
4. Press the Koster Joint Tape onto fresh adhesive layer.
5. Immediately apply a second layer of adhesive on top of the tape and overlapping the masking tape on the sides. The center of the tape stays free of adhesive.
6. Remove the masking tape on both sides before the adhesive cures in order to achieve a clean finish.
7. Leave the finished job to cure for approx. 24 hours.
8. After Koster KB-Pox Adhesive has cured for 24 hours, the area water-proofing can be applied overlapping onto the epoxy layer.