
# Getting started with the Delta Pumps App

Step-by-step instructions for Delta Registered Installers, Pump Servicing Providers and Property Owners/ Facilities Managers

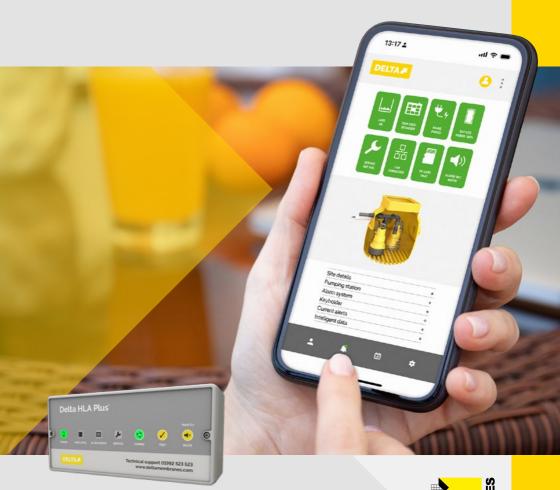

# Discover peace of mind today

Call 01992 523 523 or email info@deltamembranes.com for details



#### HOW TO REGISTER AND GET FULL USE OF THE DELTA PUMPS APP

#### Delta Pumps App

The Delta Pumps App can be accessed via the below methods:

**QR Code** – Located on Device side panel. Every Delta HLA Plus device comes with a unique QR code, located on the device packaging and the device side panel.

URL - https://pumps.deltapumpsapp.com

Delta's Main website –
www.deltamembranes.com

App -

## How to add a Web App to the Home Screen



- Open a URL address
   of a PWA you want to install in your
   browser.
- 2. Open your browser's settings.
- 3. Scroll down and tap

  Add to Home screen
- 4. Confirm by tapping Add.

#### Sign in or set up an account

Once you've set up an account, you can sign in for adding keyholders, viewing "Go live" pump station performance, finding a pump servicing provider, booking a pump servicing provider to visit your pumping system and more.

If you already have a Delta Pumps App login account, you can use the email address and password to log in.

To create a Delta Pumps login account, you must be aged 18 or over, and have an email address and password to log in.

- Enter your email address
- Create a password, confirm password
- Enter your contact details
- Confirm if you are a Delta Customer,
  Delta Registered Pump Servicing
  Provider or a Property Owner
  (Homeowner, Facilities Manager,
  person responsible for maintaining
  a structure that a Delta HLA Plus
  device is located in)

#### Delta Pumps App Dashboard

https://pumps.deltapumpsapp.com

Experience convenience like never before with the Delta Pumps App. Offering a user-friendly dashboard and an array of features designed to safeguard your pumping station(s), this app is a game-changer in the industry.

Once you have created an account, you will need to register your Delta HLA Plus/Delta HLA Plus Intelligent device.

To Register a device - you will need to enter its serial number either manually or scan the QR code found on the device. All Delta HLA Plus/Delta HLA Plus Intelligent devices have easily accessible QR codes for streamlining registration.

## Where to Find the Serial Number and QR Code of Your Device

There are two methods to find your Delta HLA Plus device serial number.

- On any compatible Android phone, iPhone or tablet, open the built-in camera. Point the camera at the QR code. Tap the banner that appears.
- Serial numbers can be found on side panels of Delta HLA Plus Devices on Delta HLA Plus Device packaging.

#### To Register Device

- Enter Address where Delta HLA Plus device is installed
  - Complete online form fields.
- Add Keyholders.
- Click agreement to Terms and Conditions.
- Click to Register Device.

# OR code sticker





#### ALWAYS KNOW WHAT'S HAPPENING WITH YOUR PUMPING STATION, DAY, OR NIGHT. KNOW WHAT'S ACTIVATING AS IT HAPPENS.

By registering a Delta HLA Plus Device on the Delta Pumps App, users gain access to a real-time analysis of their pumping station(s). This allows for prompt detection and resolution of service, maintenance, or repair needs. Moreover, the Delta HLA Plus offers live data on pump station activity. For those unfamiliar with Apps, these are software applications designed for use on a variety of electronic devices, including smartphones, computers, and tablets.

The Delta Pumps App is an internetdependent, web-based app that stores all pump station data online. This web-based feature helps conserve memory space on your Delta HLA Plus device.

Consider this: a service free of subscription fees, yet packed with a multitude of features. Say goodbye to hidden charges and hello to a world of possibilities.

Don't just take our word for it, experience it yourself!



#### **HEAD OFFICE**

Delta House, Merlin Way, North Weald, Epping, Essex, CM16 6HR 01992 523 523 | info@deltamembranes.com | www.deltamembranes.com